Trimble Business Center -Kodebibliotek

Baseret på TBC v.4.0

Geoteam A/S Energivej 34 2750 Ballerup

7733 2233 support@geoteam.ok www.geoteam.dk

10.marts 2018 udarbejdet af Peter Viskum Jørgensen



Åben Feature Definition Manager I TBC kan <i>Feature</i> <i>Definition Manager</i> åbnes via GIS fanen	Home Vere Data Survey OS CAD Adt Surfaces Control of Features Map Write Features Control of Control
vælg Feature Definition	
Derved åbnes et nyt vindue	Feature Definition Manager File Edit Help Market State Sta
Opret et nyt	(17) Lastan Datation Manager
kodebibliotek	File/ddr. Help
Under <i>File</i> Vælg <i>New File</i>	New File CRL+N Open CRL+O Sine CRL+SC Sine CRL+SC Sine As CRL+SCST+S Dora CRL+I4 Properties Import Sine Costore CSV File Import Import Costore CSV File Properties Exports CrData/18C Training/the tonder forzyning/Tondfor _ modified P/LfsI C/Data/18C Training/the tonder forzyning/Tondfor fill blo Calesem.ful C/Ubes/up/Documents/Freeture Definition Manager/GlobalFreetures.ful Ent
Vælg navn og gem med	
det samme:	File Edit Help
Save As	Image: Sevent As CTRL+N Image: CTRL+S Image: C













Integer:	Nore 1						
Heltal	Descripture.						
Tilsvarende <i>Number,</i> med heltal i stedet	Entry mode Optimul Default volue Next desce genetic Microare volue. Macimum volue.	•					
		CH.	and				
Tekst:							
Er et fritekst felt som f.eks kan bruges til noter							
List	E List						x
Liste der kan vælges på	Name:			List Value	s:		
Controlleren	type			Type1 Type2		Up	
objekt.	Description:			Туре3		Down	
Entrv Mode:	Entry mode:					Default	t
Vælg mellem <i>Optional,</i> <i>Required</i> eller <i>office use</i> <i>only</i> alt efter om hvad der er tilladt med pågældende attribut.	Optional		•		OF	Add Remove	e
Typerne tilføjes eller fjernes med <i>Add</i> hhv. <i>Remove</i>	_						
Færdig kode med	 C'Users/pujl. 'Geoteom_pujlt Geoteom_pujlt Geoteom Sock Control Codes 	Feature Definition	on Properties			-	Port
attributter kunne se sådan	Vatur Vatur Vand	Name: Code:	Stophane				Colo
ud		Category:	Teknik			•	
	Groups	Feature layer:	Points			•	
		Atributes		Entry made	future and a	Descention	-
		Nedatik Retest Prope		Optional Optional Optional Optional	0,8 2 m	Nedstikadybde i mete lest stophanetype Her er et notat om alt	r bejdet



	🕸 Geoteam pyj.fxl 🛛 🔊 🖉 ? – x	
På kontrolleren vil det tilsvarende se sådan ud:	SH K B	
	Kode Beskrivelse 💦 14	
	SH Stophane	
	7 2.000	
	Menu	
	Fevorit	
	Esc RTK H:0.010m V:0.015m 🖌 Enter	
	SH → Ø Ø ? - ×	
Og attributterne ser sådan ud:	Nedstik: test: 0.8 • 2	
	type: Note:	
	r r	
	RTK H:0.010m V:0.015m	
	Esc Optioner Gem	
Geometrikoder	- C:\Users\pvj\Documents\Feature Definition Manager\Geoteam_pvj.fxl	
Hvis man vil arbejde med		
geometrier sammen med	- 😁 🗣 🔩 🖄 👫 🐂 🤫 😵	
koderne vælges	pvj.fxl Feature Definition Properties	
New Line Control Code	Feature	
	Name: Stophane	
	Code: SH	
Her kan man selv definere	New Line Control Code	
koder som f.eks	Name I	
1 = start linie	Code: Stats a new line joining sequence. The previous joining sequence with the same mode is avoid	
9= slut linie	Selected action:	
5 Side mile	Rots a new live print sequence. The previous prints sequence with the same code is ended Ends the line joining sequence	-
Eller beliggende på en kurves eller lignende	Joins to a specified point name lignores any joining operation	
	Coses a time to the test point in the sequence. Cose a line when a new one is stated or when a line ends. Stats a tangential arc Ends a tangential arc	
	All actions: Stats a non-tangential arc Ends a non-tangential arc	E
	Starts a smooth curve Ends a smooth curve Starts a circle with an associated point as the first known point on the circle followed by the next two know	
	Stats a circle with an associated point as the center and a specified radius. If the radius is not specified, th Stats a rectangle with an associated point as a comer point and the next point in sequence as an adjacer	re .
	Locats on unset line at the specified horizontal unset	
	UN Lance	The second second



Export til	Export file	
Controller	Source file:	C:\Users\pvj\Documents\Feature Definition Manager\Geoteam_pvj.fxl
Tilslut controlleren til PC'en Vælg <i>File, Export</i>	File type: Target file: Device name: Application:	Export to file Upload to a device Simple text file exporter (.csv) C:\Users\pvj\Documents\Feature Definition Manager\Geoteam_pvj No device connection detected. OK Cancel
Hvis man har en controller forbundet til PC'en kan man også exportere og upload'e direkte f.eks til en TSC3'er. Vælg <i>File Type</i> :	Export file Source file: File type: Target file: Device name:	C:\Users\pvj\Documents\Feature Definition Manager\Geoteam_pvj.fxl Export to file Upload to a device FXL 8.0 upload (*fxl) Geoteam_pvj TSC3RS57C93858
f.eks som <i>.fxl</i> eller <i>.csv</i> Tryk <i>OK</i>	Application:	Trimble Access OK Cancel
Hermed uploades kodebiblioteket		
Færdig		

